

Glow-Rite®

Instructions



Necessary Tools

- Knife

Coverage

Coverage: 112 lineal ft (34 m)





Preparation


- Install forms per Cantilever Form Instructions provided.

Installation


1. After the form is placed and secure, measure out fiberoptic track staggering the breaks or seams of the track between breaks in the form. Pre-bend the fiberoptic track for corners and radii where necessary. Do not start and stop fiberoptic track in a radius.
2. Position the fiberoptic track in its grooves along the form. Insert the anchors, with the anchor post facing horizontally, through the holes on the track on the interior side of the form. Turn the anchor 90 degrees clockwise to a vertical position, locking it into place.
3. Press the button over the anchor shaft on the exterior of the form to secure the track and anchor.
4. When the concrete has solidified to the point where the form can be removed, remove anchor buttons first. To remove, rotate anchor buttons counterclockwise, serving the anchor behind the surface of the track. The remaining portion of the embedded anchor holds the fiberoptic track securely in the concrete. Continue removing forms per form instructions revealing the cantilever edge and open fiberoptic track.

Top View Staggering seams

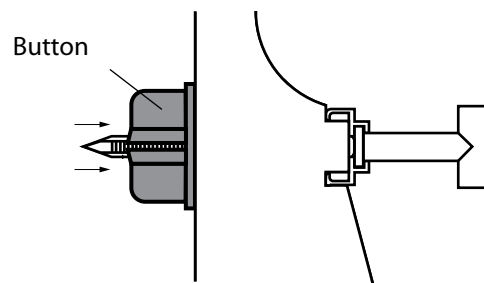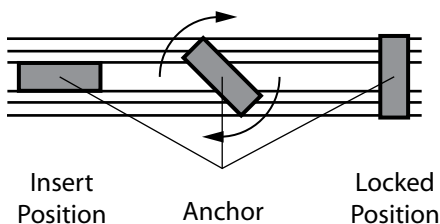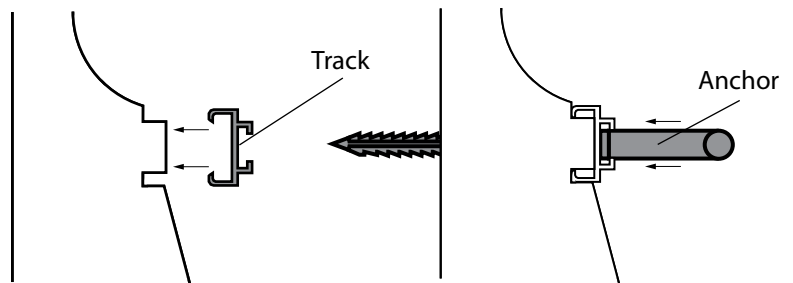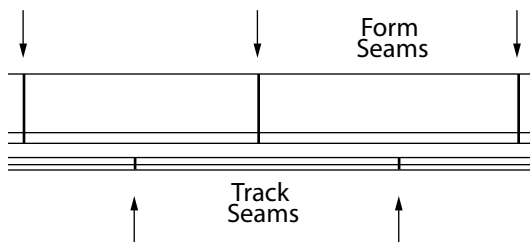


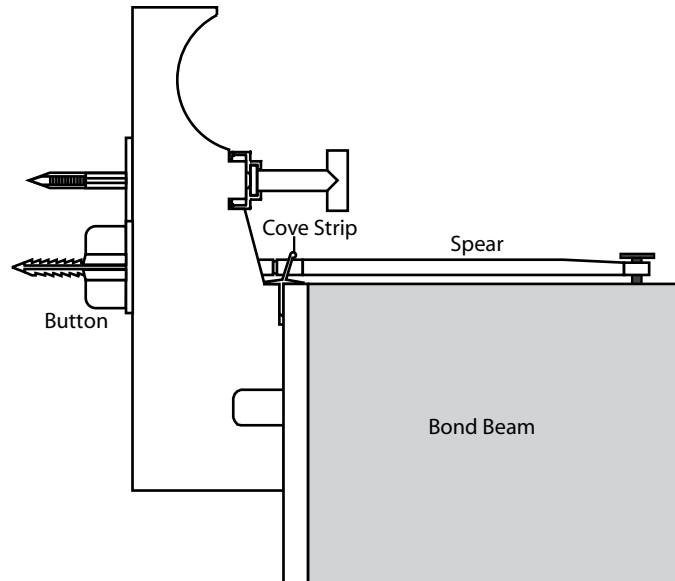


Available Glow-Rite Forms

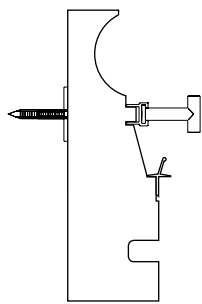


Standard

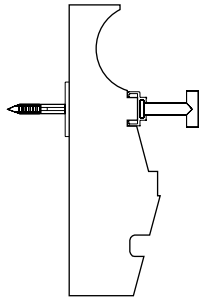


Fiberglass

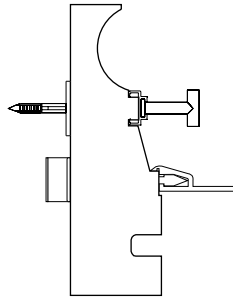

Vinyl Liner

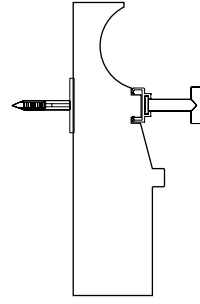

Cornis Moulding

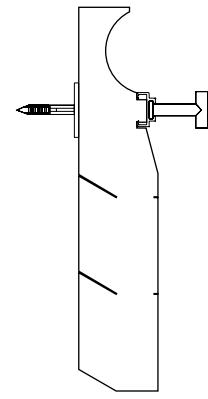

Step

The manufacturer offers this product and Information in good faith, but without guarantee either expressed or implied, as conditions and methods of use of our product are beyond our control.